

ANALOGUE POWER METERS

ACTIVE, REACTIVE, APPARENT POWER METERS AND POWER FACTOR METERS WITH EXCHANGABLE SCALES

EQ 0207 / 2207 / 0107 / 2107 & YQ 0207 / 2207 / 0107 / 2107

- MEASUREMENTS OF ACTIVE OR REACTIVE ENERGY OR APPARENT POWER (EQ) OR POWER FACTOR (YQ).
- SINGLE OR THREE PHASE, 3 OR 4 WIRE, BALANCED OR UNBALANCED CONNECTION.
- STANDARD 96 X 96 DIN CASE (EQ X207, YQ X207) OR STANDARD 144 X 144 DIN CASE (EQ X107, YQ X107).
- PROTECTIVE COVER FOR TERMINAL.
- USB SERVICE PORT.

FEATURES

- Measurements of active or reactive or apparent power (EQ) or power factor (YQ).
- Single or three phase, 3 or 4 wire, balanced or unbalanced connection.
- Standard 96 X 96 DIN case (EQ x207, YQ x207) or standard 144 x 144 DIN case (EQ x107, YQ x207).
- Exchangeable scale.
- Frequency range from 16 Hz to 400 Hz.
- Automatic range of nominal current (max. 12.5 A).
- Protective cover for terminal.
- USB service port.

DESCRIPTION

The meter is intended for measuring power and power factor in single-phase or three-phase electrical power network. The meter measure according to the principle of fast sampling of voltage and current signals. A built-in microprocessor calculates power and power factor from the measured signals.

USE

The meter is intended for measuring power of single-phase or three-phase electric distribution system.

SHIP VERSION

Special "ship version" are delivered for building into ships. These are mechanically resistive instruments which correspond to the rules of construction of seagoing ships (Bureau Veritas certified).

COMPLIANCE WITH STANDARDS

Standard EN	Description
61010-1	<i>Safety requirements for electrical equipment for measurement, control and laboratory use.</i>
60529	<i>Degrees of protection provided by enclosures (IP code).</i>
62051-1	<i>Direct acting indicating analogue electrical measuring instruments and their accessories.</i>
61326	<i>Electrical equipment for measurement, control and laboratory use – EMC requirements.</i>

* – Partial compliance

DESCRIPTION OF PROPERTIES

Measurands

Measurements of momentary active, reactive, apparent power and power factor.

Analogue pointer

Two types of pointers are available EQ 0x07 and YQ 0x07 have 90° analogue pointer. EQ 2x07 and YQ 0x07 have 240° analogue pointer.

End scale value

The end scale value is determined as follows:

The power to be measured by the instrument can be calculated by using one of the formula below:

Power system	Active	Reactive	Apparent
Single-phase	$U I \cos\phi$	$U I \sin\phi$	$U I$
3-phase 3-wire	$\sqrt{3}U I \cos\phi$	$\sqrt{3}U I \sin\phi$	$\sqrt{3}U I$
3-phase 4-wire	$3 U I \cos\phi$	$3 U I \sin\phi$	$3 U I$

Power factor is calculated from active and apparent power U in equations is the phase voltage in single-phase system, line voltage in three-phase 3-wire system, and phase voltage in three-phase 4-wire systems.

According to the calculated value, one of the following standard end scale values and their decade are chosen:

1 – 1.2 – 1.5 – 2 – 2.5 – 3 – 4 – 5 – 6 – 7.5 – 8

Supply

Power supply connection of the meter is adaptive. Meter can be supplied internally from voltage measuring inputs or externally via separate connector.

USB service communication (option)

Meter can be equipped with service port with mini USB connector that can be used for setting. This port is not galvanic separated and for this reason, BEFORE USE INPUT VOLTAGE AND POWER SUPPLY ON THE METER MUST BE DISCONNECTED.

Communication via service port is time limited.

TECHNICAL DATA

Inputs

Input signals	Current	Voltage
Nominal frequency range	$\pm 0.2\%$	EN 61557-12
Measuring frequency range	$\pm 0.2\%$	EN 61557-12
Nominal value (I_N, U_N)	$\pm 0.5\%$	EN 61557-12
Maximal value	$\pm 0.5\%$	EN 61557-12
Consumption	Cl. 0.5S	EN 62053-22

Supply

Power supply	AC
Nominal voltage AC	57.7 / 63.5 / 100 / 110 / 230 / 400 V
Nominal frequency	40 Hz – 65 Hz
Nominal voltage DC	–
Consumption	< 1.5 VA

Safety:

Protection:	protection class II 600 V rms, installation category II 300 V rms installation category III Pollution degree 2
Enclosure material	In compliance with EN 61010-1 PC/ABS Incombustibility – self-extinguishability, complying with UL 94 V-0
Enclosure protection:	IP 52 (IP 00 for terminals) In compliance with EN 60529
Cutting for installation:	92 ^{+0,8} mm 138 ^{+0,1} mm
Converter mass:	max. 600 g

Mechanical

Dimensions	144 × 144 × 100 mm (CT 101.5 mm)
Mounting	Panel mounting 144 × 144 mm
Required mounting hole	137 × 137 mm
Enclosure material	PC / ABS
Flammability	Acc. to UL 94 V-0
Weight	550 g
Enclosure material	PC / ABS
	Acc. to UL 94 V-0

Ambient conditions:

Temperature range of operation: -10 °C ... 60 °C

Storage temperature -40 °C to +70 °C

Average annual humidity ≤ 75 % r.h. (no condensation)

Reference conditions:

Ambient temperature: -10 °C ... 23 ... 55 °C

Voltage input: +/- 20% U_n

Current input: 0 ... 100 % I_n
 $\cos\phi=1 / \sin\phi=1$

Waveform: Sinus

Accuracy

Measurand	Accuracy
Active or reactive or apparent power	1.5

CONNECTION

Voltage inputs can be connected either directly to low-voltage network or via a high-voltage transformer to high-voltage network.

Current inputs shall be connected to network via a corresponding current transformer.



System / connection

Through-hole connection assignment

Terminal connection assignment





1b (1W1b)

Single-phase connection

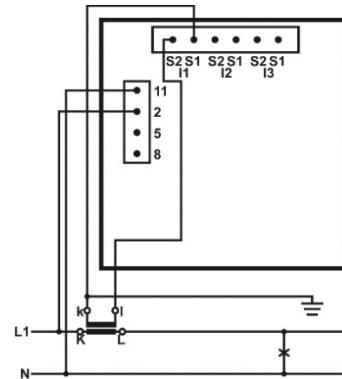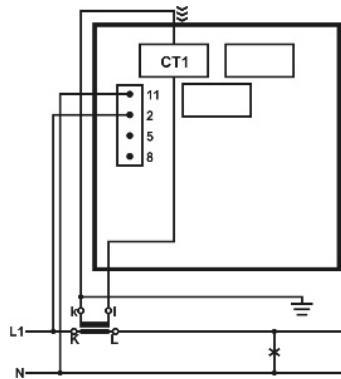





3b







Three-wire, balanced load

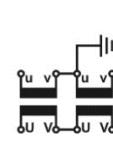
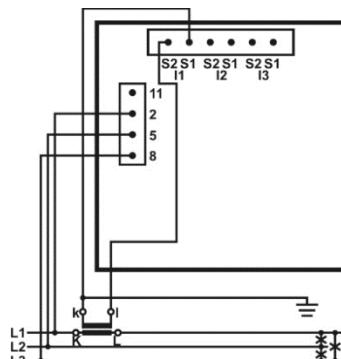
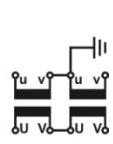
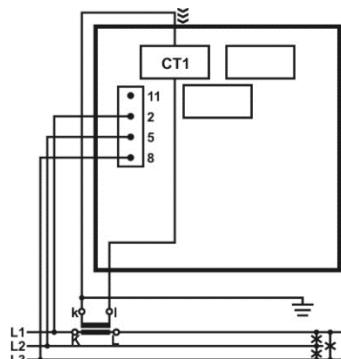


3u

Three-wire, unbalanced load.

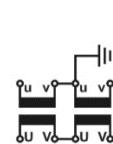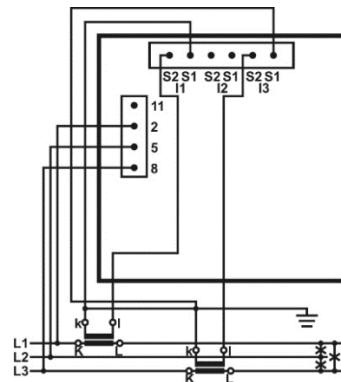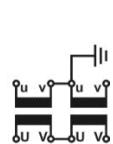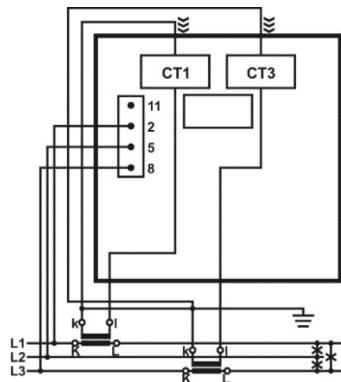

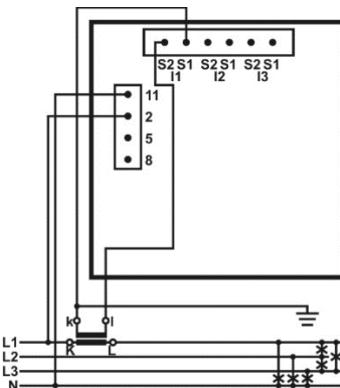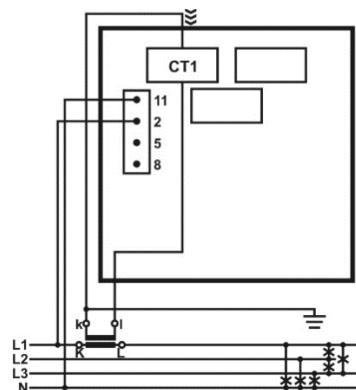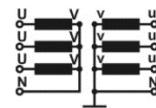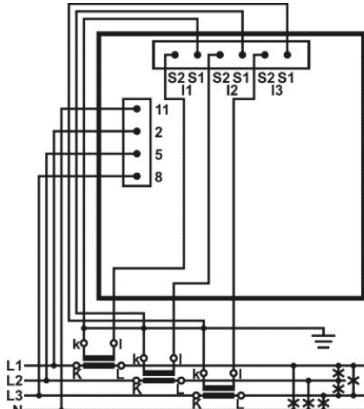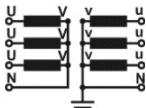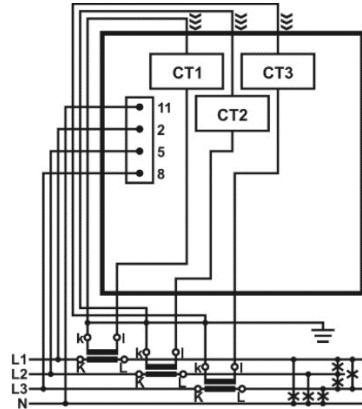System / connection**Through-hole connection assignment****Terminal connection assignment****4b***Four wire, balanced load***4u***Four wire, unbalanced load.*

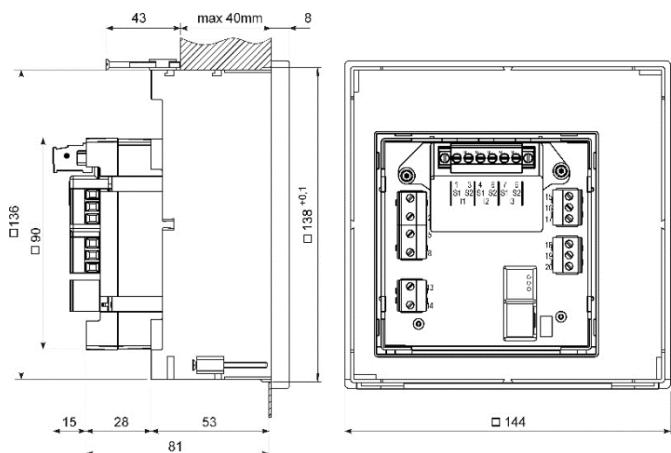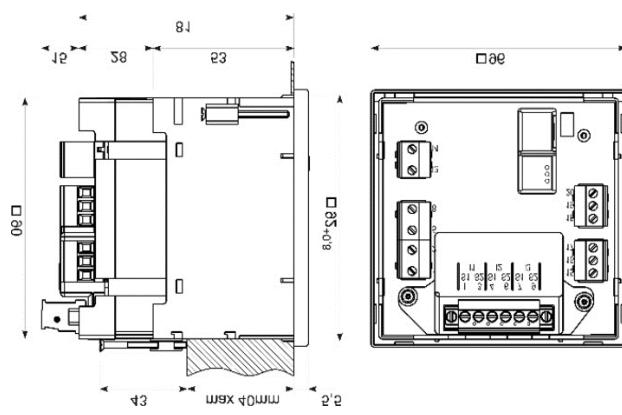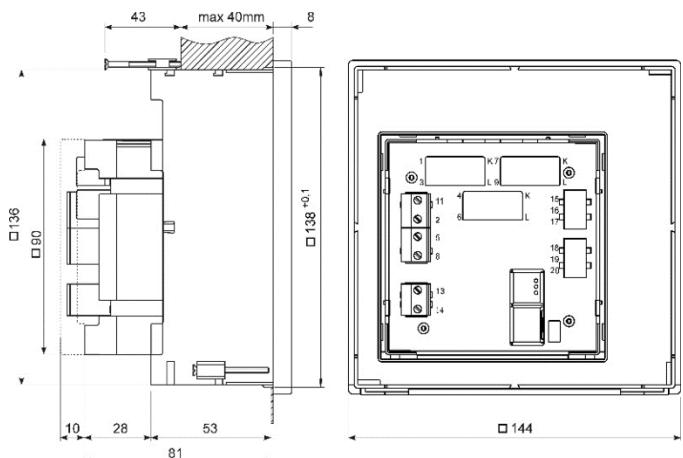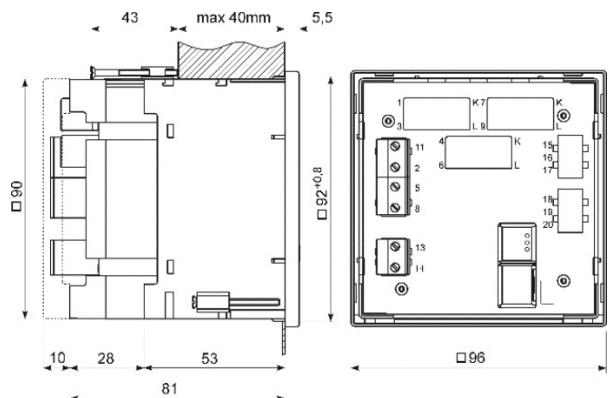DIMENSIONAL DRAWING


CONNECTION TABLE

Function		Terminals		
Measuring input:	AC current	IL1	CT1	
		IL2	CT2	
		IL3	CT3	
	AC voltage	UL1	2	
		UL2	5	
		UL3	8	
		N	11	
Auxiliary power supply:		AC (L)	13	
		AC (N)	14	

Communication terminals

Communication	Terminals
USB service port	USB Min-B type

Terminals

Connection	Max. conductor cross-sections
Voltage inputs (4)	≤ 2.5 mm ² ; one conductor
Current inputs (3)	≤ Ø mm; one conductor with insulation
Power supply (2)	≤ 2.5 mm ² ; one conductor

DATA FOR ORDERING

The following data shall be stated:

Type of a meter
 Connection
 VT and CT ratio
 Voltage range
 Type of power supply
 Scale data
 Special option

EQ xx07 general ordering code

When ordering the meter, all required specifications shall be stated in compliance with the ordering code:

Device Type	Class	Zero position	Connection	Nominal voltage	Nominal current	Frequency range	Auxiliary supply	Current Connection	Service Comm.	Finish	Window	Dial	Index Type	Zero Adjuster Colour	Protection Cover	
EQ x207	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	Yes*

Legend for protection covers:

- S** Black*
- W** White
- S** Single Scale*
- D** Double Scale
- S** Standard with Scale*
- N** Bianco Dial
- X** No Dial
- A** Clear Glass*
- B** Clear Glass + Red Adj. Index
- L** Anti-Glare Glass
- D** Anti-Glare + Red Adj. Index
- A** Standard*
- H** HVE (Tropical Seal)
- M** Inc. Mech. Resistance
- S** Ship Ver.
- P** IP54
- G** HVE + IP54
- R** Ship Ver. + IP54
- T** Ship Ver. + HVE
- V** Ship Ver. + HVE + IP54
- Without***
- M** Mini USB
- T** Through Hole Transformer*
- C** Screw Terminal Connector

Legend for auxiliary supply:

- X** Internal L1-N
- Y** Internal L1-L2
- A** E 57,7 V
- B** E 63,5 V
- C** E 100 V
- D** E 110 V
- E** E 230 V
- F** E 400 V
- J** E 440 V
- S** 50 Hz*
- T** 60 Hz
- R** 45...65 Hz

Legend for connection:

- 1A** 1A
- 5A** 5A

Notes:

- Not available if Finish is P, G or V

			57P	57,7 V L-N \	100L	100 V L-L \	57V7	57,7/100V \
			63P	63,5 V L-N I	110L	110 V L-L I	63V5	63,5/110V I
			66P	66,4 V L-N I	115L	115 V L-L I	66V4	66,4/115V I
			69P	69,3 V L-N I	120L	120 V L-L I	69V4	69,3/120V I
			100	100 V L-N I	220L	220 V L-L I	110V	110/190V I
			115	115 V L-N I	225L	225 V L-L I	120V	120/208V I
			127	127 V L-N 1B	230L	230 V L-L I	127V	127/220V I
			130	130 V L-N Connect.	380L	380 V L-L 3B and 3U	130V	130/225V 4B and 4u
			132	132 V L-N I	400L	400 V L-L Connect	132V	132/230V Connect
			220	220 V L-N I	415L	415 V L-L I	220V	220/380V I
			230	230 V L-N I	440L	440 V L-L I	230V	230/400V I
			240	240 V L-N I	450L	450 V L-L I	240V	240/415V I
			250	250 V L-N I	460L	460 V L-L I	254V	254/440V I
			254	254 V L-N /	470L	470 V L-L I	277V	277/480V I
					480L	480 V L-L I	288V	288/500V /
					500L	500 V L-L /		
			1B	Single phase				
			3B	3 phase 3 wire balanced				
			3U	3 phase 3 wire unbalanced				
			4B	3 phase 4 wire balanced				
			4U	3 phase 4 wire unbalanced				
			L	0/1*				
			C	-1/0/1				
			F	-0.1/0/1				
			A	-0.x/0/1				
			S	1.5*				
			H	1.0				


EQ 0107 Power meter 144 mm 90°

EQ 0207 Power meter 96 mm 90°


EQ 2107 Power meter 144 mm 240°

EQ 2207 Power meter 96 mm 240°

* _Default ordering value

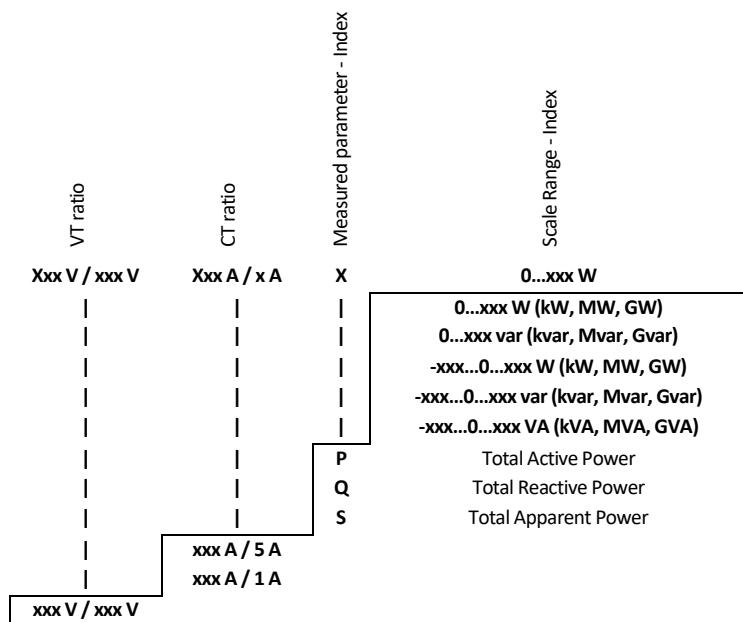EQ xx07 general ordering code- configuration settings:


YQ xx07 general ordering code:

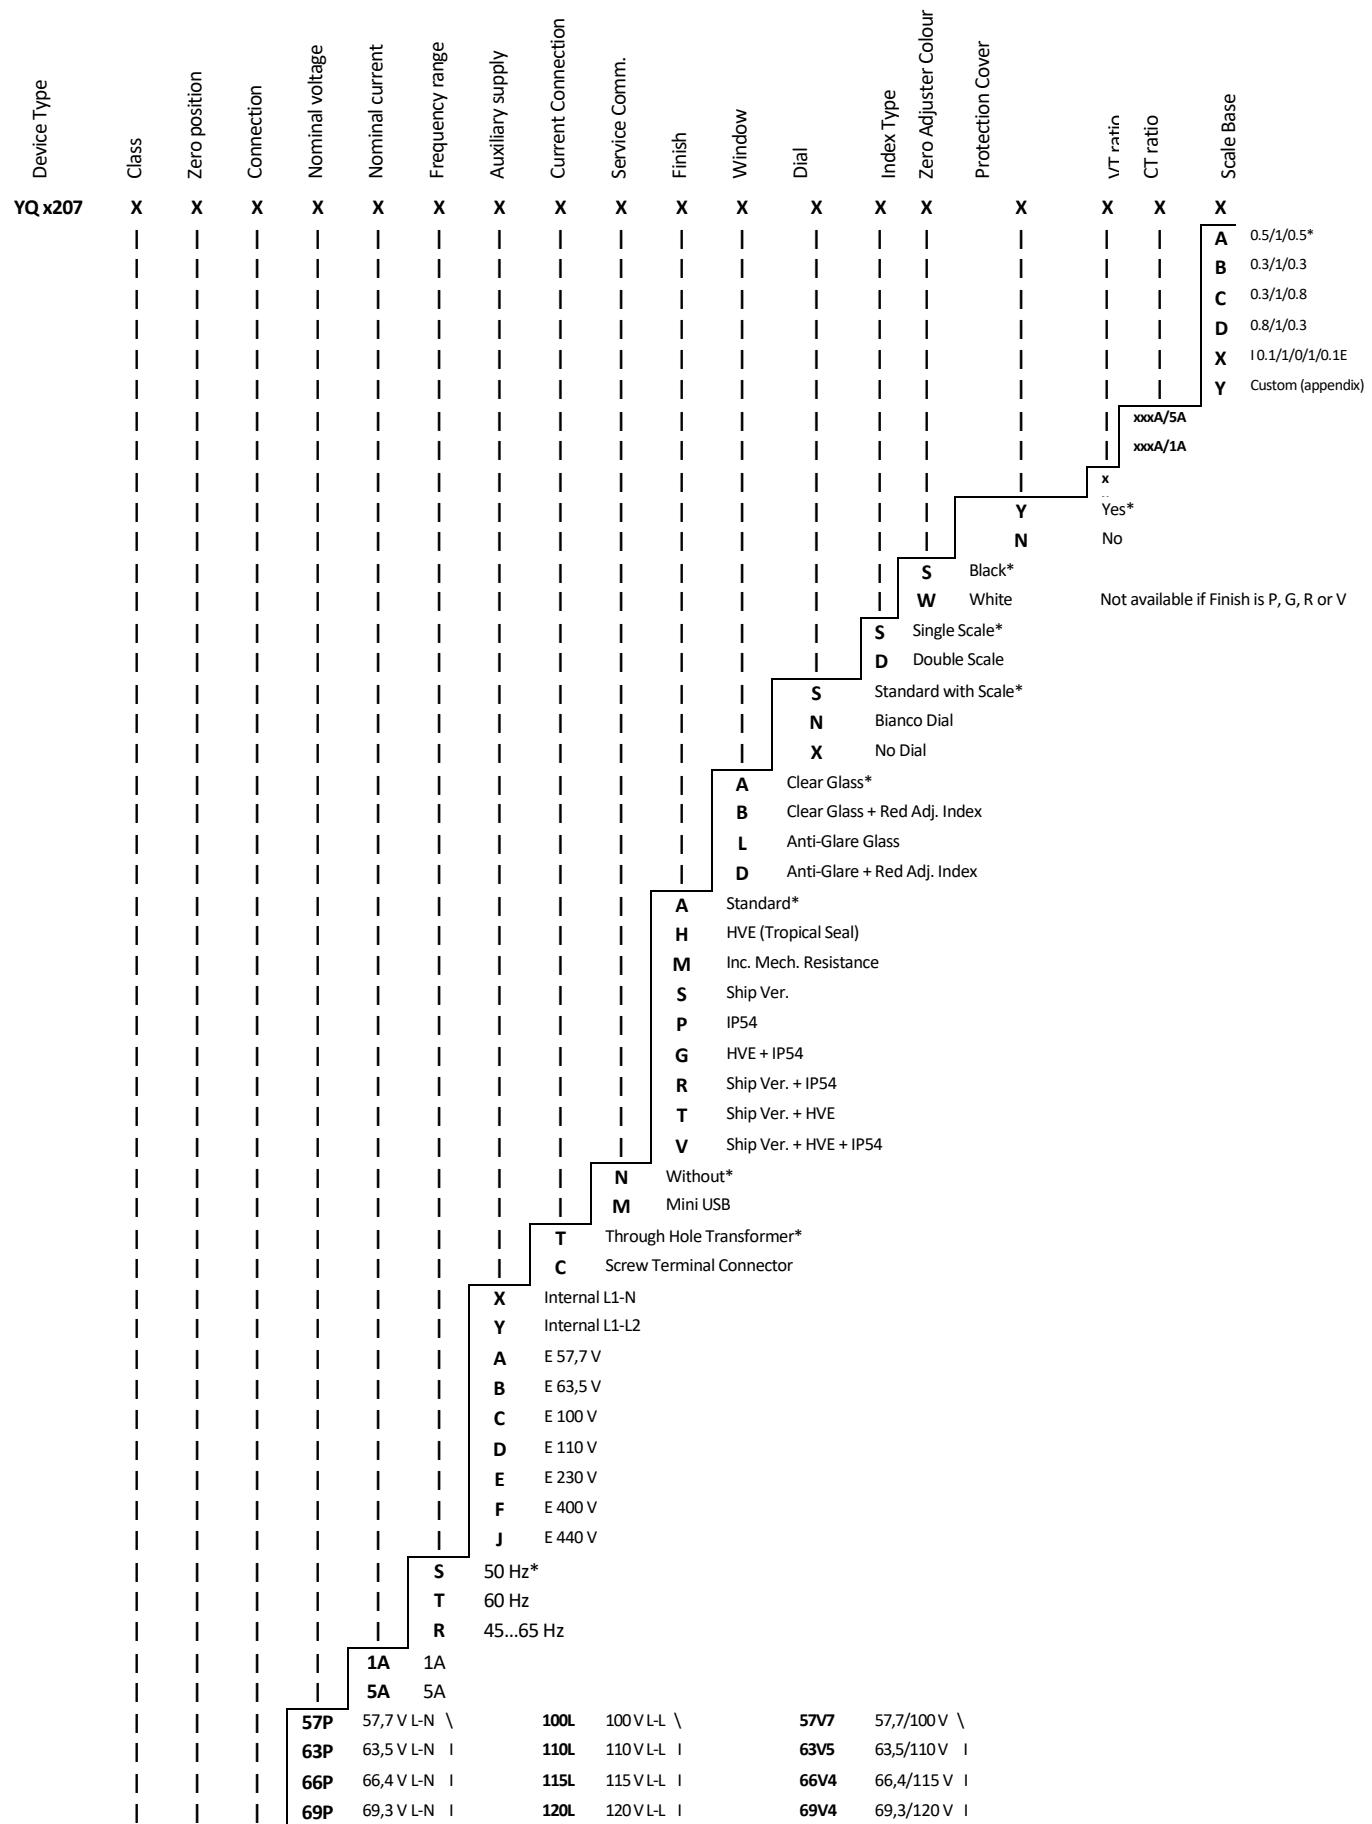

			100	100 V L-N I	220L	220 VL-L I	110V	110/190 V I
			115	115 V L-N I	225L	225 VL-L I	120V	120/208 V I
			127	127 V L-N 1B	230L	230 VL-L I	127V	127/220 V I
			130	130 V L-N Connect.	380L	380 VL-L 3B and 3U	130V	130/225 V 4B and 4u
			132	132 V L-N I	400L	400 VL-L Connect	132V	132/230 V Connect
			220	220 V L-N I	415L	415 VL-L I	220V	220/380 V I
			230	230 V L-N I	440L	440 VL-L I	230V	230/400 V I
			240	240 V L-N I	450L	450 VL-L I	240V	240/415 V I
			250	250 V L-N I	460L	460 VL-L I	254V	254/440 V I
			254	254 V L-N /	470L	470 VL-L I	277V	277/480 V I
					480L	480 VL-L I	288V	288/500 V /
					500L	500 VL-L /		
			1B	Single phase				
			3B	3 phase 3 wire balanced				
			3U	3 phase 3 wire unbalanced				
			4B	3 phase 4 wire balanced				
			4U	3 phase 4 wire unbalanced				
		L	0 / 1*					
	S	1.5*						
	H	1.0						
YQ 0107				Power Factor meter 144 mm 90°				
YQ 0207				Power Factor meter 96 mm 90°				
YQ 2107				Power Factor meter 144 mm 240°				
YQ 2207				Power Factor meter 96 mm 240°				

* Default ordering

Example of ordering:


EQ 0207 meter will measure active power with 90° pointer (standard scale). It is connected directly to the three-phase 4-wire system with phase voltage 230 V_{L-N}, nominal current 5A and frequency range 50Hz. Device is powered from measuring circuit. It has no communication build in. Cut-out for panel is 96 x 96 and standard finish.

Example ordering code:

EQ 0207 S L 4U 230 V 5A S X T N A A S S S Y

EU DIRECTIVES:Directive **2014 / 35 / EU** on low voltage.Directive **2014 / 30EU** on electromagnetic compatibility.

Directive on RoHS 2011 / 65 / EU.

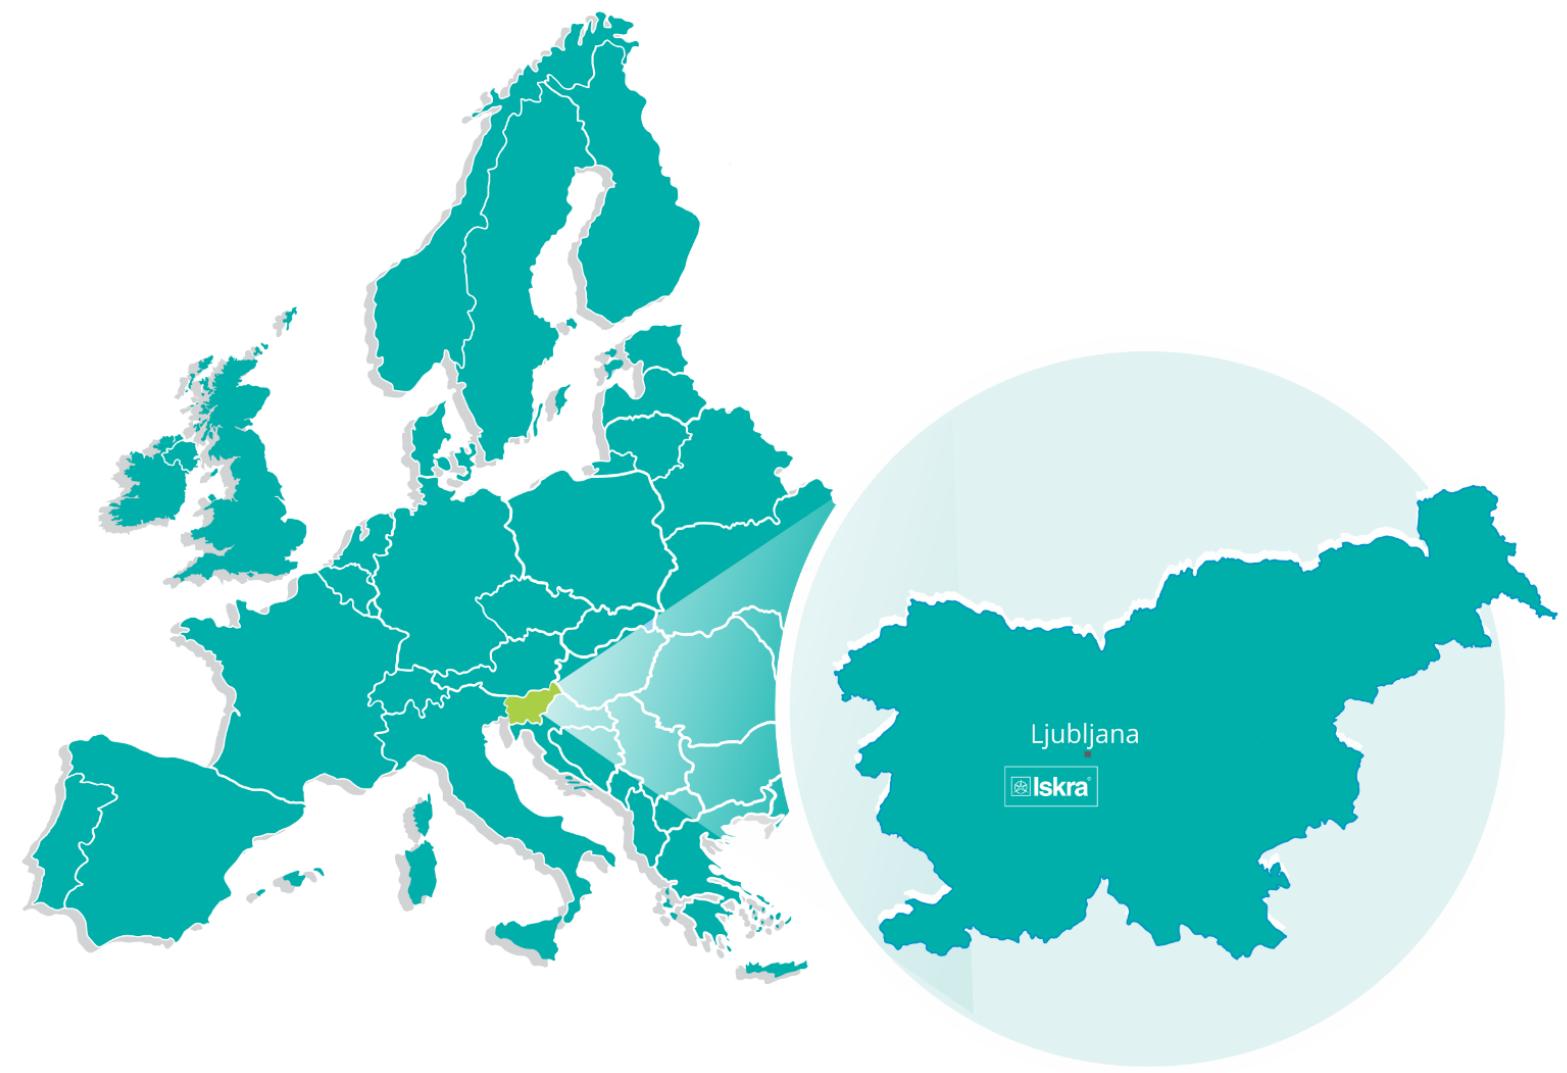

PE Ljubljana

Stegne 21
SI-1000 , Ljubljana
Phone: + 386 1 513 10 00

PE Kondenzatorji

Vajdova ulica 71
SI-8333 , Semič
Phone: +386 7 38 49 200

PE MIS

Ljubljanska c. 24a
SI-4000 , Kranj
Phone: +386 4 237 21 12

PE Baterije in potenciometri

Šentvid pri Stični 108
SI-1296 , Šentvid pri Stični
Phone: +386 1 780 08 00

PE Galvanotehnika

Glinek 5
SI-1291 , Škofljica
Phone: +386 1 366 80 50

Iskra IP, d.o.o.

Metliška cesta 8
SI-8333 , Semič
Phone: +386 7 384 94 54

Iskra Lotrič, d.o.o.

Otoče 5a
SI-4244 , Podnart
Phone: +386 4 535 91 68

Iskra ODM, d.o.o.

Otoče 5a
4244 , Podnart
Phone: +386 4 237 21 96

Iskra STIK, d.o.o.

Ljubljanska cesta 24a
SI-4000 , Kranj
Phone: +386 4 237 22 33

Iskra Tela L, d.o.o.

Omladinska 66
78250 , Laktaši
Phone: +387 51 535 890

Iskra Sistemi - M dooel

Ul, Dame Gruev br. 16/5 kat
1000 , Skopje
Phone: +389 75 444 498

Iskra Commerce, d.o.o.

Hadži Nikole Živkovića br. 2
11000 , Beograd
Phone: +381 11 328 10 41

Iskra Hong Kong Ltd.

33 Canton Road, T.S.T.
1705 , China HK City
Phone: +852 273 00 917
+852 273 01 020



Iskra, d.o.o.

Stegne 21
SI-1000 Ljubljana, Slovenia

Phone: +386 (0) 1 513 10 00
www.iskra.eu